

SR Elevator Door Interlock: Single Swing Door

General Installation Guidelines - *NOTE: The photo shown below is for mock up purposes only. Your installation might vary.*


Photograph shows a typical SR Door Interlock installation. Latch is mounted to the door and the door interlock is mounted to the inside hoistway wall. This view is from the inside the hoistway.

SR Accessories & Typical Setup

Make sure you order your Emergency Door Release Kit when ordering your SR. This will complete your installation. Simply drill a 1" diameter hole through the wall, insert some rigid piping, thread the chain through the wall, and attach the chain to the roller arm.

In the event of an emergency either break the glass, or open the cover with a key, pull the chain and the roller arm releases.

If you're using a lunar key, then drill a .5" hole through the door behind the escutcheon plate, which will allow the key to go through the door to press the latch up.

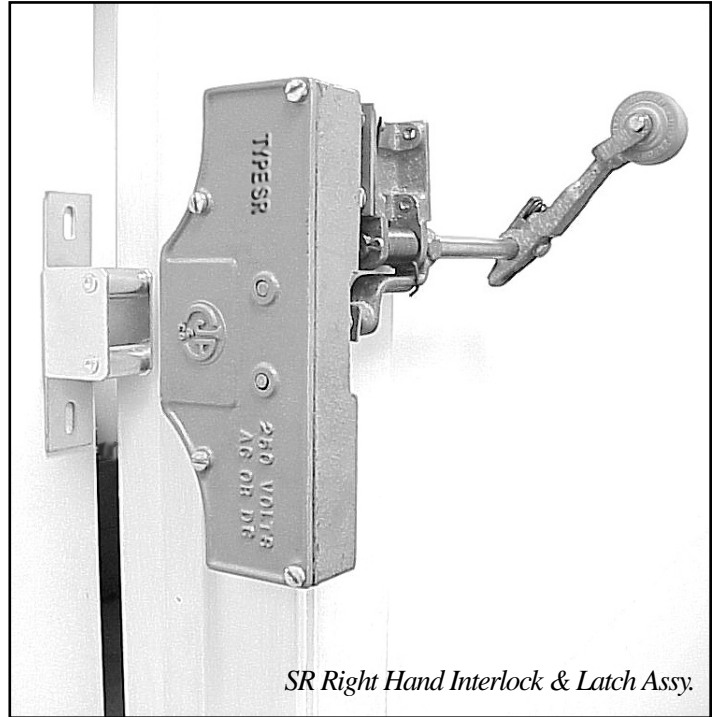


SR Right Hand Interlock & Latch Assy.

In the event of an emergency simply break glass cover, or use key to unlock cover, pull the chain inside the box and the roller arm will release the latch allowing the door to open.



ITEM: 77784-C
*KEB - Lockable Emergency Box with Glass Cover
Used with HG-1, HG-2, CV-1, CV-2, SR, HR-1, LR, L-1,
RSB & SDC Interlocks*

ITEM: 78123
Lunar Escutcheon Plate: Used Only on SR Interlock

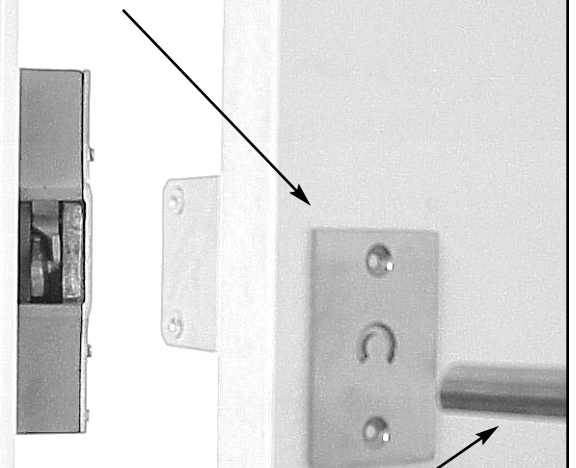

ITEM: 78124
*Lunar Emergency Door Release Key
Used Only on SR Interlock*