

C.J. ANDERSON & CO. *Push Pull Button Red 08*

INSTALL THIS PRODUCT ON PIT SWITCHES, CAR TOP INSPECTION STATIONS ONLY

- Do not use for any hazardous location that requires explosion proof protection. Use 716-901-XES
- Do Not Install In Fire Service 2004 Cabinets. Use 716-025-C

If you have any questions please call us toll free at 1-800-252-1910

ITEM: 716-025-C-R
RED/PUSH PULL BUTTON ASSEMBLY. SEALED NEMA 4/12/4X

TOOLS NEEDED

- Hammer, Phillips Screw Driver
Long Nose Pliers

Install In 51101-4X, 51101-4 & 722-303 Item Numbers Only

RED MUSHROOM
PUSHBUTTON
ASSY (1X)



GALVANIZED
WASHER FOR
EXISTING 1"
HOLES (1X)



CONTACT BLOCK
HOLDER WITH SET
SCREWS (1X)



CONTACT BLOCKS
N.O CONTACT (1X)
N.C. CONTACT (1X)



IMPORTANT WARNING

Technical Assistance - CJA staff personnel are available to answer any questions concerning the use or application of CJA products. However, any field changes made to the products are the sole responsibility of the user, unless authorized by CJA in the form of revised wiring diagrams or technical bulletins.

Maintenance of Products - All CJA products require scheduled periodic inspections, adjustments, lubrication and other routine maintenance actions. Non-performance of maintenance will nullify the product warranty.

LIMITS OF LIABILITY CJA's entire liability and the purchaser's exclusive remedy shall be as follows: In all situations, including performance or non-performance of the material ordered, the purchaser's remedy is that provided under the warranty provision. CJA's liability for loss of or damage to purchaser for any cause whatsoever and regardless of the form of action, contract or in tort, including negligence, shall be limited to the price of the part on which such liability is based. CJA will not be liable for any injury, special, direct or consequential damage, loss of time, profit or other losses, labor charges, repairs, expenses or other cost arising out of the incorrect use of, or the inability of the purchaser to use the product. Correction of any defects by repair or replacement by CJA shall constitute fulfillment of all obligations to the purchaser. In no event will CJA be responsible for any loss, damage or delay. In no event will CJA be liable for any damages caused by purchaser or for any lost profits or other special, incidental or consequential damages. CJA products are only warranted to function as designed and manufactured. If the product does not meet the purchasers' expectations or standards, the purchaser is still obligated to pay for the product in full.

WARRANTY - All CJA products are warranted to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of shipment, provided they are (1) paid for, (2) installed as designed and (3) used for the purpose intended. This warranty will only be effective after notification from the purchaser of a product defect, return of the part freight prepaid, and after CJA inspection proves the part to be defective. CJA's total obligation under this warranty is to repair or replace free of charge defective products. If the product is determined to be out of warranty an estimate to repair will be sent to the purchaser.


Before using or furnishing to another for their use, the purchaser shall determine the suitability of the product for its intended use and purchaser assumes all risks and liabilities in connection therewith. Any unauthorized repairs or adjustments shall cancel this warranty and shall relieve the company from any further responsibility.

FOR A COMPLETE COPY OF OUR TERMS AND CONDITIONS PLEASE CALL 1-800-252-1910.

Item#: 716-025-C-R Rev. A.

1

Remove Old Pushbutton Assembly From Cover Plate (disconnect live power to device!)

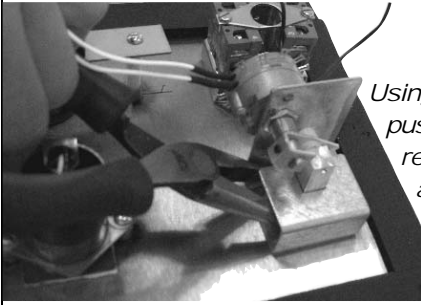

Using pliers and hammer push "C" clip so that it releases the pushbutton and contact block assembly. Remove from face plate.

2

Unscrew As Shown Below To Remove Entire Assembly.




3

Insert New Mushroom Head into existing hole & place washer over back of pushbutton



4


Tighten set screws on both sides of contact block holder so that they are tight.

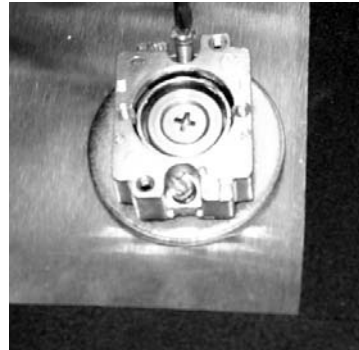

Make certain that pushbutton is centered in hole to prevent dust and moisture from entering station.

5

Screw in both contact blocks as shown below. Mounting bolts on outside as noted in picture. Wire contact blocks as noted. And turn power back on!

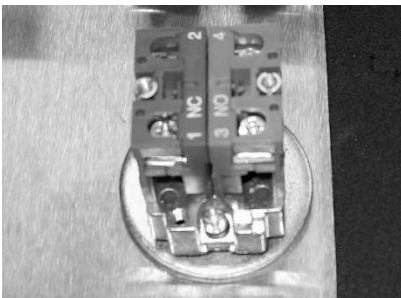

**PUSH
TO
STOP**

Connect Wires To
Normally **CLOSED**
Contact

**PULL
TO
STOP**

Connect Wires To
Normally **OPEN**
Contact

Please note that one normally opened and one normally closed contact block is provided with this kit. Please wire your contact block so that it removes power from the elevator system as the engraving indicates. Always test with a meter!

MAINTENANCE: - As with all moving parts this operator may require maintenance. The design and construction is intended for wet and dusty locations. These location may require that lubrication to the moving contact block parts be performed on regular basis. It is up to the elevator technician to determine how often to lubricate the moving components based on the environmental conditions and how severe they are.



C.J. ANDERSON

& COMPANY

Helping You One Floor At A Time. Since 1910!

C.J. ANDERSON & COMPANY

4751 N. Olcott Avenue
Harwood Heights, IL 60706

Phone: 1-800-252-1910

Fax: 1-708-867-5467

www.cjanderson.com