

# LR Elevator Door Interlock: Horizontal Slide

**General Installation Guidelines** - *NOTE: The photo shown below is for mock up purposes only. Your installation might vary.*

Photograph shows a typical LR Door Interlock installation. Latch is mounted to the door and the door interlock is mounted to the inside hoistway wall. This view is from the inside the hoistway.

## LR Accessories & Typical Setup


Make sure you order your Emergency Door Release Kit when ordering your LR. This will complete your installation. Simply drill a 1" diameter hole through the wall, insert some rigid piping, thread the chain through the wall, and attach the chain to the roller arm.

In the event of an emergency either break the glass, or open the cover with a key, pull the chain and the roller arm releases.



*LR Right Hand Interlock*

*ITEM: 78244  
LR Door Latch - comes with each interlock.*

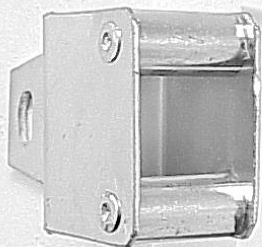

*In the event of an emergency simply break glass cover, or use key to unlock cover, pull the chain inside the box and the roller arm will release the latch allowing the door to open.*



*ITEM: 77784-C  
KEB - Lockable Emergency Box with Glass Cover  
Used with HG-1, HG-2, CV-1, CV-2, SR, HR-1, LR, L-1,  
RSB & SDC Interlocks*